

## Key Chain Remote RKR24 Installation and operating instructions

The RKR24 SlimLITE remote works with the RR501 (part of the RC5000) and the TM751 (part of the RC6500). It lets you turn on and off two individually coded X-10 Modules and brighten and dim lights connected to Lamp Modules and Wall Switch Modules. In the default state (after first fitting the battery) the RKR24 is set to Housecode A. The first (top) two ON-OFF buttons control modules set to Unit Code 1. The second (middle) two buttons control A2.

1. Plug in an X-10 Transceiver (RR501 or TM751, sold separately).
2. To turn on or off X-10 Modules set to Unit Code 1 (on Housecode A) press the first (top) ON or OFF button. To turn on or off X-10 Modules set to Unit Code 2 (on Housecode A) press the second (bottom) ON or OFF button. To brighten or dim Lamp Modules or Wall Switch Modules press the number button first, the press Bright or Dim button. If you want to control Modules 1 and 2 on Housecode A, that's it. You don't need to read any further.

### To change the Housecode


- Press and hold the first (top) ON and OFF buttons at the same time for 2-3 seconds to enter Program Mode (the LED stays on).
- Press and release the first (top) **ON** button the appropriate number of times for the Housecode you want to set. Once for A, twice for B, etc. The LED blinks off for each press.
- Press the second (bottom) ON or OFF button to return to Normal Mode. The unit will also return to Normal Mode if no keys are pressed for more than 30 seconds.

**To change the Unit Code for the first (top) two buttons** (the second pair of buttons are always one # higher than the first pair, i.e. if you set the first button to 6, the second button controls 7, etc.).

- Press and hold the first (top) ON and OFF buttons at the same time for 2-3 seconds to enter Program Mode (the LED stays on).
- Press and release the first (top) **OFF** button the appropriate number of times for the Unit Code you want to set. Once for 1, twice for 2, etc. The LED blinks off for each press.
- Press the second (bottom) ON or OFF button to return to Normal Mode. The unit will also return to Normal Mode if no keys are pressed for more than 30 seconds.

**To change the battery:** Pry the unit apart and fit a CR2025 Lithium 3V battery. Observe polarity.

**F.C.C. CAUTION - THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION. NOTE: NO CHANGES OR MODIFICATIONS MAY BE MADE TO THE UNITS. ANY CHANGES MADE TO THE UNITS WILL VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.**

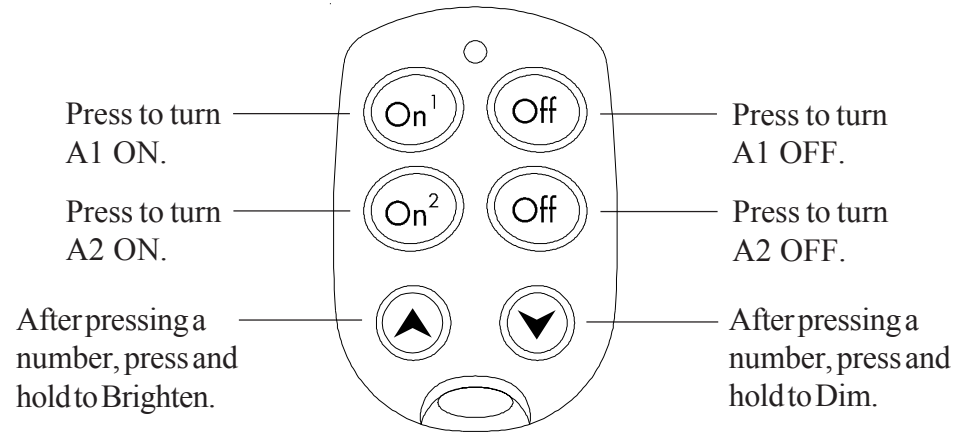

### X-10(USA)INC.LIMITED 1-YEAR WARRANTY

X-10(USA) Inc. warrants X-10 products to be free from defective material and workmanship for a period of one (1) year from the original date of purchase at retail. X-10(USA) Inc. agrees to repair or replace, at it's sole discretion, a defective X-10 product if returned to X-10(USA) Inc. within the warranty period and with proof of purchase.

If service is required under this warranty:

1. Return the defective unit postage prepaid to X-10(USA) Inc. (see address on back).
2. Enclose a check for \$4.00 to cover postage and handling.
3. Enclose a dated proof of purchase.
4. X-10 is not responsible for shipping damage.  
Units to be returned should be packed carefully.
5. For additional warranty information, contact X-10(USA) Inc.

Your Name .....

Address .....

Date Purchased ..... 19..... Store where purchased .....